



INSTRUCTION MANUAL

DOCUMENT NO. 027-5039
Rev. 1.03 Oct. 21, 2004

A faint, light gray world map is centered in the background of the page.

Saflink Kit for the GP10 / VG10 Inverter Series

Saftronics, Inc.

5580 Enterprise Pkwy

Ft. Myers, FL 33905

Tel. (239) 693 - 7200

Fax (239) 639 - 2431

www.saftronics.com

SAFETY FIRST !


LETHAL VOLTAGES MAY BE PRESENT

PLEASE READ THIS MANUAL THOROUGHLY BEFORE ATTEMPTING ANY INSTALLATION, OPERATION, MAINTENANCE, OR INSPECTION. FAILURE TO FOLLOW THE RECOMMENDED PROCEDURES OR CAUTIONS IN THIS MANUAL COULD RESULT IN INJURY TO PERSONNEL AND / OR DAMAGE TO THE EQUIPMENT.

CAUTION

- 1 – CHECK THE NAME WRITTEN ON THE PRODUCT AND INSURE THAT THE PROPER PART HAS BEEN RECEIVED.
- 2 – THOROUGHLY INSPECT THE PART(S) FOR ANY DAMAGE DUE TO SHIPMENT OR HANDLING.
- 3 - THE PART(S) MAY CONTAIN CMOS CHIPS AND CAN BE DAMGED BY STATIC ELECTRICITY. HANDLING SHOULD BE IN ACCORDANCE WITH INDUSTRY STANDARDS.
- 4 - BEFORE INSTALLING THE PART(S) TURN OFF ALL POWER TO THE EQUIPMENT AND INSURE THE CHARGE INDICATOR LAMP ON THE INVERTER IS **OFF**. **LETHAL VOLTAGES ARE PRESENT**
- 5 - DO NOT CONNECT OR DISCONNECT WIRING WHILE POWER IS **ON!**
- 6 - FOLLOW GOOD STANDARD WIRING PRACTICES AND ANY APPLICABLE CODES THAT MAY APPLY.

CAUTION ! Make sure all power to the equipment is off before making inverter connections, as lethal voltages are present.

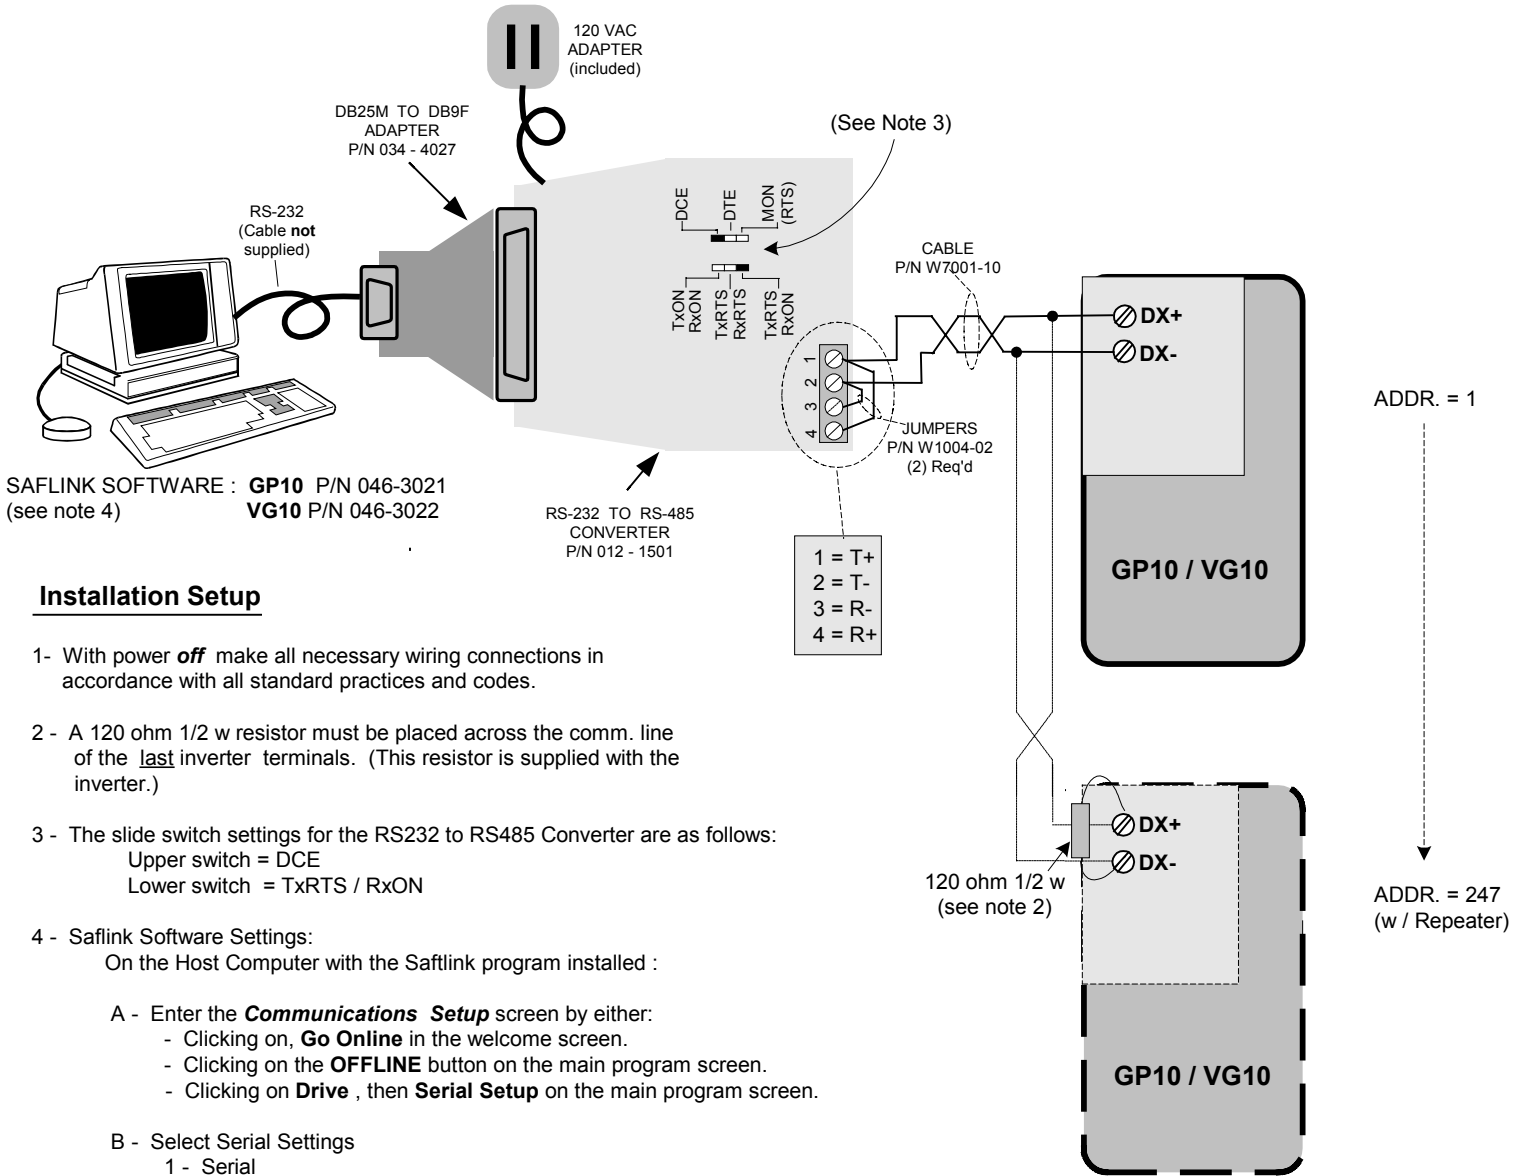

SAFLINK SOFTWARE : **GP10** P/N 046-3021
(see note 4) **VG10** P/N 046-3022

Installation Setup

- 1- With power **off** make all necessary wiring connections in accordance with all standard practices and codes.
- 2 - A 120 ohm 1/2 w resistor must be placed across the comm. line of the last inverter terminals. (This resistor is supplied with the inverter.)
- 3 - The slide switch settings for the RS232 to RS485 Converter are as follows:
Upper switch = DCE
Lower switch = TxRTS / RxON
- 4 - Saflink Software Settings:
On the Host Computer with the Saflink program installed :
 - A - Enter the **Communications Setup** screen by either:
 - Clicking on, **Go Online** in the welcome screen.
 - Clicking on the **OFFLINE** button on the main program screen.
 - Clicking on **Drive** , then **Serial Setup** on the main program screen.
 - B - Select Serial Settings
 - 1 - Serial
 - 2 - Single drive or Drive Network (See Networking Setup)
 - 3 - Communications port Comx (user determined)
 - 4 - Port Setup:
 - Baud Rate Setting 9600
 - Stop Bit Selection 2 Stop Bits
 - Parity Selection No Parity
 - Data Format 8 Bits
 - 5 - Connection Timing
 - Transmission Delay 1 ms.
 - Response Delay 25 ms.
 - Check Echo back suppression
 - 6 - Station Number - 1 - 247 (Assigned by user in setting of parameter H31 in drive)

- Networking Setup :**
On each drive on the network :
- Enter the programming mode with the keypad.
 - Set: H31 Serial Connection Station Address = (As required)
 - H34 Serial Connection Transmission Speed = 9600 (Baud)
 - H36 Serial Connection Transmission Parity = No Parity
- * Most of the drive software settings are set by default, but should be checked for conformance.

Drive Series	KIT P/N	Software P/N	Kit Includes			
			Accessories Pkg. P/N 046-9026 to Include			
			RS232/RS485 Converter P/N	DB25M/DB9F Adapter P/N	Cable P/N	Jumpers P/N
GP10	046-GP10SL	046-3021	012-1501	034-4027	W7001-10	W1004-02 (2) Req'd
VG10	046-VG10SL	046-3022				

GP10 / VG10 SAFLINK KIT

WARNING!

Saftronics manufactures component parts that can be used in a wide variety of industrial applications. The selection and application of *Saftronics* products remains the responsibility of the equipment designer or end user. *Saftronics* accepts no responsibility for how its products may be incorporated into the final design.

Under no circumstances should any *Saftronics* product be incorporated into any product or design as the exclusive or sole safety control. Without exception, all controls should be designed to dynamically fault detect and fail safe under all circumstances. All products designed to incorporate a component part manufactured by *Saftronics*, must be supplied to the end user with appropriate warnings and instructions as to the safe use and operation. Any warnings provided by *Saftronics* must be passed through to the end user.

Saftronics offers an express warranty only as to the quality of its products to conform to the catalog specifications. NO OTHER WARRANTY, EXPRESS OR IMPLIED, IS OFFERED. *Saftronics* assumes no liability for any personal injury, property damage, losses or claims, arising out of the mis-application of its products.